


# Vehicles Wires Alambres Del Vehículo Câblage De Véhicule

# Upgraded Harness Arnés Mejorado Faisceau De Câbles Amélioré

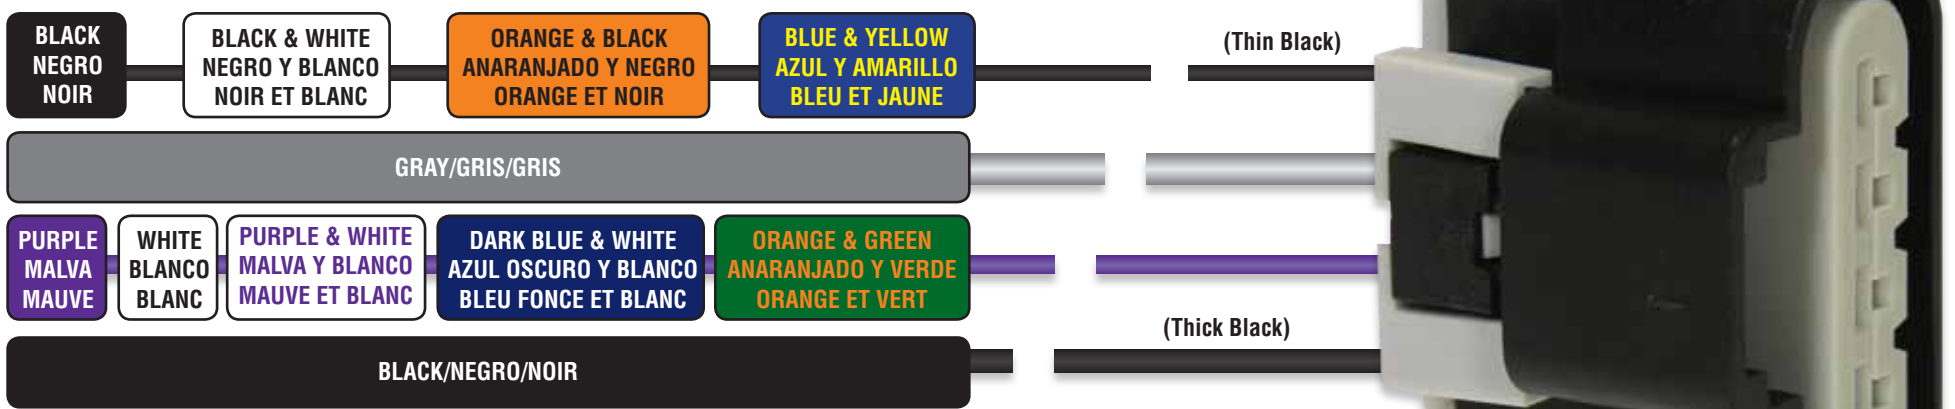

**THIN BLACK**  
NEGRO DELGADO  
NOIR MINCE

Sender Ground  
Puesta A Tierra Del  
Transmisor  
Mise A La Masse Du  
Capteur De Niveau  
D'Essence

**GRAY**  
GRIS  
GRIS

Pump Power  
Alimentación De  
La Bomba  
Alimentation De  
La Pompe

**PURPLE**  
MALVA  
MAUVE

Sender Signal  
Señal Del  
Transmisor  
Signal Du Capteur De  
Niveau D'Essence

**THICK BLACK**  
NEGRO GRUESO  
EPAIS NOIR

Pump Ground  
Puesta A Tierra De  
La Bomba  
Mise A La Masse De  
La Pompe



Toll Free Tech Hotline: **1-855-827-7732**


# New Harness Installation Instructions

Your new Precise fuel pump comes equipped with an improved connector and wiring harness. On the back side of this page you will find detailed color-coded instructions for matching the old vehicle wires to the new improved harness. It is critical that you follow these instructions carefully; disregarding these instructions may result in pump failure and subsequent warranty denial.


## Harness replacement instructions:

1. Disassemble the wires from the vehicles protective wiring loom.
2. Cut back wires in vehicle's harness approximately 6-8 inches from harness connector in order to have the finished harness close to the original length. *(Make sure the cuts are staggered 2-3 inches apart so they will fit neatly back in the wiring loom).*
3. Strip  $\frac{1}{4}$  inch of wire from both the wiring harness as well as the vehicle wires using a wire stripper.
4. Match the wires using the color coded diagram illustrated on the back side of this sheet.
5. Using the included butt connectors, insert and crimp the wire to make a tight connection using a wire crimping tool. (There are two size butt connectors included with your harness; make sure to match the proper connector for the wire size).

The harness is now ready to be installed.

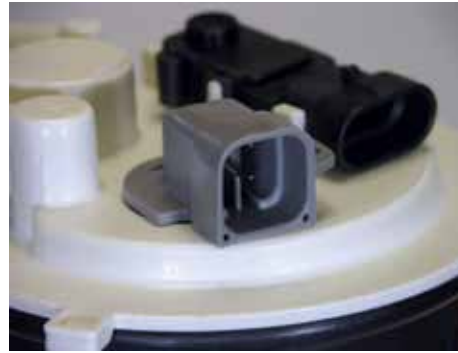


SAMPLE OF OLD VEHICLE HARNESS CONNECTOR

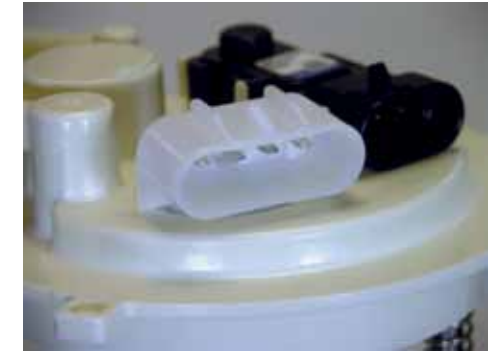

SAMPLE OF NEW IMPROVED VEHICLE HARNESS CONNECTOR


## SAMPLE OF OLD DESIGN

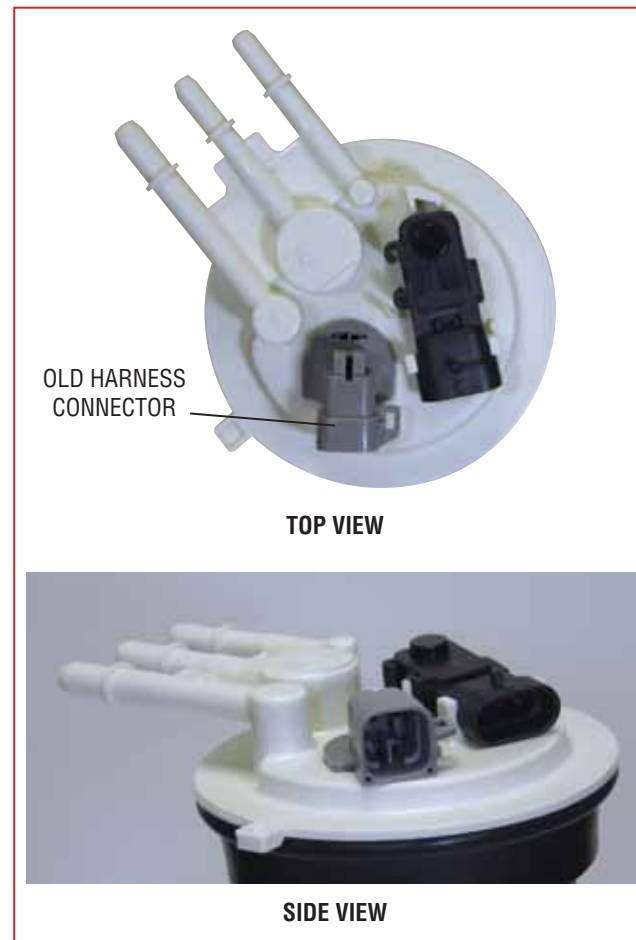

TOP VIEW

SIDE VIEW

## SAMPLE OF NEW IMPROVED DESIGN

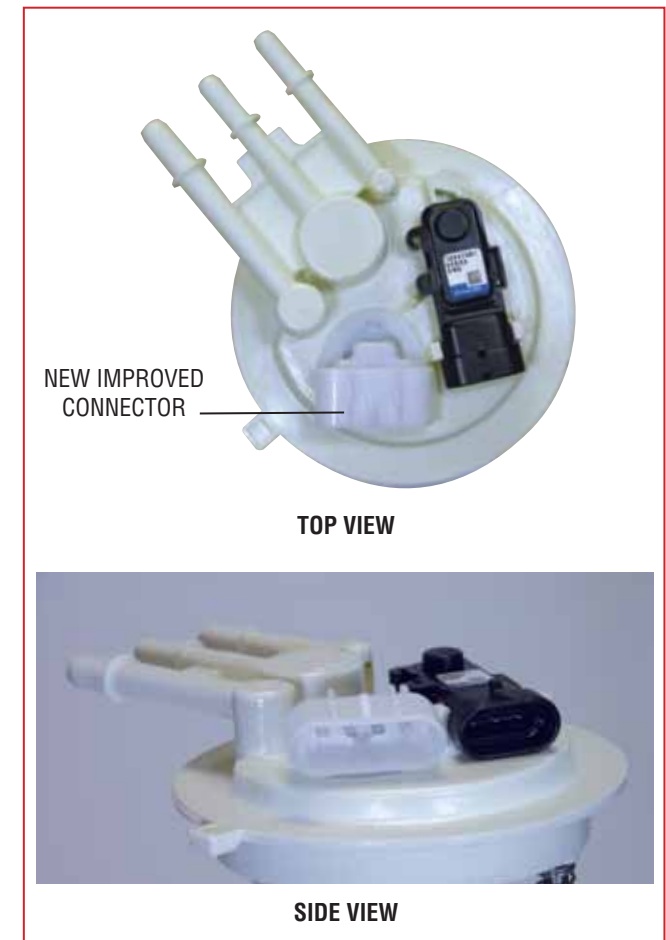

TOP VIEW

SIDE VIEW

Photos for illustration purposes only. Your Fuel Pump Assembly may look different than above.